


- +** Lift or transport a maximum of 1 package and store it on a level surface.
- +** When using a crane on the package, do not use wire ropes or chains, but secure it with straps of appropriate load-bearing capacity, always paying attention to edge protection.
- +** Lead the straps through the pallet at a distance of 2/3 of the package length, alternatively use unloading wood. (see fig.)

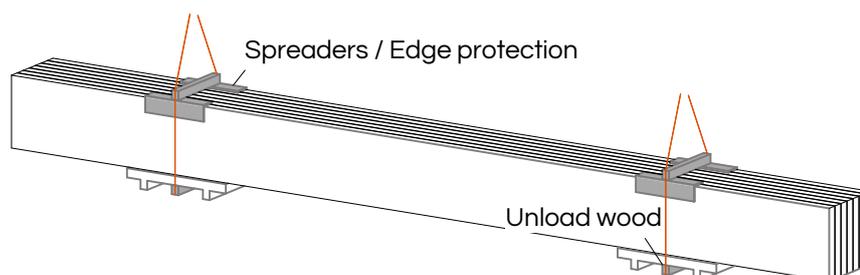

Unloading Instructions & Requirements

PRO+ Lifting, transporting, and storing products correctly

Unloading

The unloading must be carried out with the utmost care. The unloading process must be monitored and documented by the driver. Each package must be lifted or transported individually.

- a. Crane unloading
Crane unloading must be carried out exclusively with straps. No wire ropes or chains may be used. Unloading blocks are required between the strap and the pallet base to provide spacing. If necessary, edge protection must be attached.
- b. Forklift unloading
For element lengths under 6 meters, unloading with a forklift is possible.

Storage

For temporary storage on the floor, the package must be positioned at a slight angle and should stand flat. For example, battens can be used for alignment. No more than 2 packages should be stacked on top of each other. The packages must be protected from sunlight, moisture or condensation, and dirt. For ventilation, the ends of wrapped packages should be freed from the film. Opened packages must be secured to prevent the elements from slipping. For long-term storage, the protective film should be removed to avoid any markings on the surface.

If the aforementioned requirements are not followed, there is no right to make a complaint!

Assembly

The assembly should be carried out according to recognized technical standards. The surface of the PRO+ elements must be protected: prevent sparks during cutting work, protect against any foreign objects (e.g., metal shavings) and contamination. Damages should be repaired on as small an area as possible according to IFBS recommendations. Execution suggestions and assistance from our staff are to be considered non-binding recommendations. Only approved fasteners are to be used to attach the elements to the substructure. Screws must be tightened with the head properly oriented.

Protective films

The protective films must be removed immediately after installation, but no later than the same day. Partial removal of the film can lead to dirt marks.